

## X-Axis Preventative Maintenance

1. Degrease the screw and rail using degreaser or isopropyl alcohol

2. Use a grease gun containing Super Lube (shown below) to put grease into the grease zerks. Also put a thin layer the whole length of the screw and rail.



Run the Scan head left and right the length of the rail to work in the grease

